


MANUAL AND WARNING INSTRUCTION FOR „NEST SWING”

BY GARDEN LINE

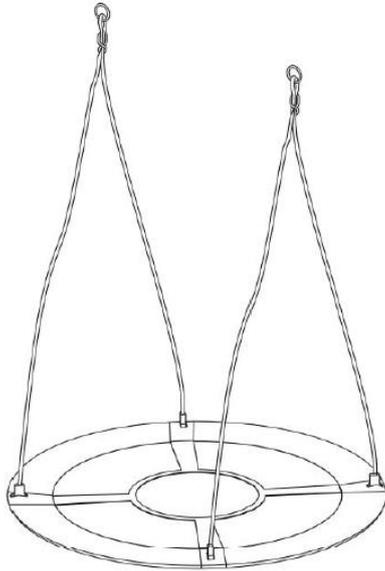

Components:

1 x seat

4 x tubes

2 x ropes / lines



WARNING!


**Improper use of the product can result in serious bodily harm or even death!
Please exercise extreme caution!**

Children should only use the swing under the supervision of an adult!



Before beginning the assembly, please make sure that all parts are present in the box. Please assemble the product according to the instructions, step by step, and if needed, ask someone for assistance.

ASSEMBLY

1. Please unfold the seat and unfasten the Velcro straps located at the openings for the tubes.

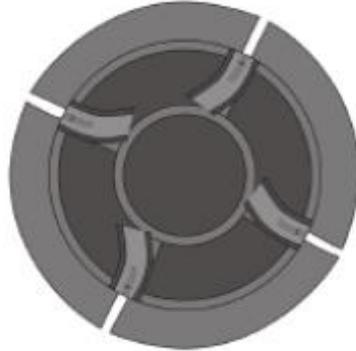


2. Please insert the tubes into the edges of the seat. When connected, they should form a circle. The ends of the tubes should overlap, and the holes and buttons should align with each other.

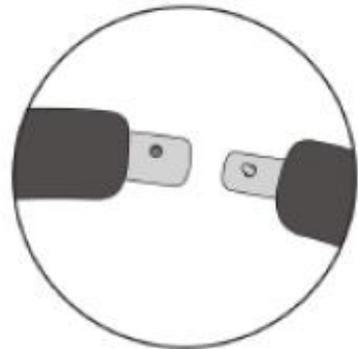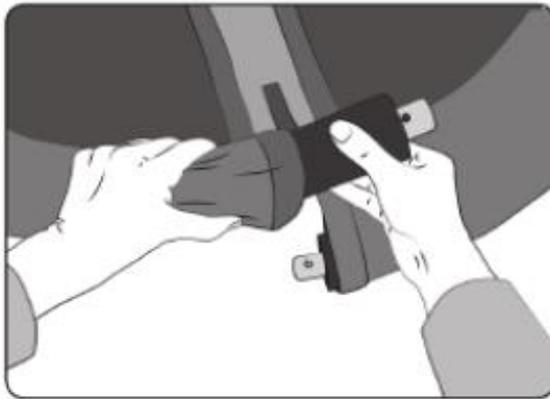


3. Please spread out the ropes at the openings as shown in the diagram below. Ensure that the ropes are not twisted.



4. Please pull the end of the rope with the ring through the corresponding hole in the material and attach the ring to the thicker tube with the side marked as II.

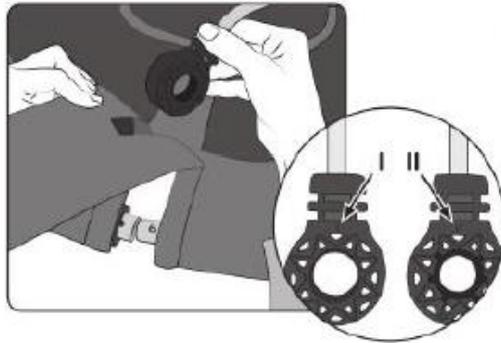

5. Please press the spring-loaded button on the thinner tube to insert it into the thicker one. Connect all the tubes in this manner. Cover each connection with the Velcro material.

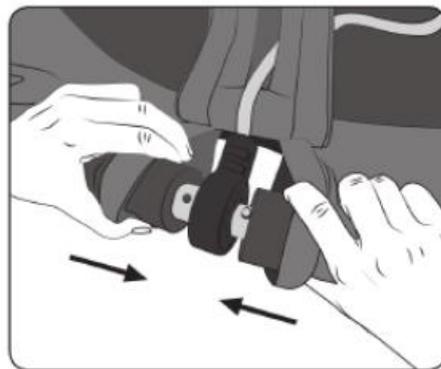

The swing is assembled and ready for use; however, it should be hung on securely anchored hooks designed for heavy loads.

To disassemble the swing, please uncover the connections by unfastening the Velcro, press the spring-loaded buttons, and separate the tubes.



SAFETY AND USAGE GIUDELINES

Please carefully read the instructions and adhere to all recommendations. Failure to follow these guidelines can lead to accidents, resulting in injury to individuals or damage to the product. If the product is to be passed on to someone else, please include the instructions.

The swing is intended for outdoor recreational use only.

This product is not intended for children under 3 years of age.

The maximum allowable weight capacity is 150kg.

Only one person should be on the swing at a time.

Before use, ensure that all components are properly connected and undamaged.

Please use the product while wearing appropriate attire, without hanging elements that could entangle around the body.

Falling from the swing can cause serious injuries, so it is not recommended to hang it over hard surfaces such as asphalt, concrete, or cobblestones.

Use the product as intended, with one person seated in the center of the seat and holding onto the ropes.

Do not allow children, other individuals, or animals near the swinging swing, as this poses a risk of accidents.

Jumping on the swing and climbing its ropes are prohibited.

Do not modify the product's structure or add additional elements. The manufacturer is not responsible for damage caused by self-modification of the swing.

Protect the product from adverse weather conditions such as heavy rain, hail, strong sunlight, etc.

Clean the product with a gentle, slightly damp cloth (optionally with a small amount of soap). Do not use strong detergents.

The manufacturer is not liable for damage caused by improper use.

The importer/manufacturer reserves the right to make modifications and changes to the instructions.


WARNING!

The product contains small parts that are not suitable for children under 3 years old. There is a risk of swallowing, choking, or suffocation! This applies to both the product itself and its packaging!

Children over 3 years old can use the swing only under the supervision of a responsible and sober adult!

PLEASE EXERCISE EXTREME CAUTION!


The swing should be installed exclusively on a sturdy hook, using an appropriate frame or carabiner that can withstand heavy loads.

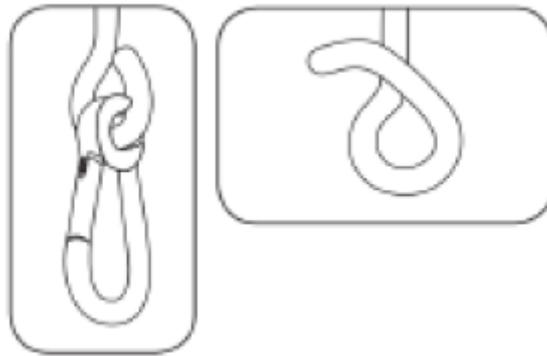

The swing should hang at least 35cm above the ground. Legs and feet should not touch the ground while swinging, so adjust the suspension height accordingly.

The suspension points should be spaced apart from each other by at least the diameter of the swing seat (+/- 10cm).

Ensure a minimum of 60cm of free space on each side of the swing.

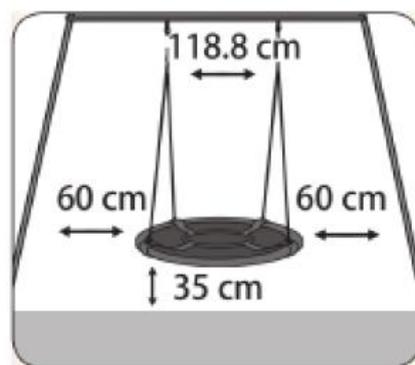

The length of the ropes can be adjusted using the rings located on them. The length of the ropes should always be the same. Adjusting the ropes while using the product is prohibited.



Please regularly check the condition of the ropes and other swing components. In case of damage to any part, immediately discontinue use of the product and replace the damaged elements.